


#### *Step 4: Left Inner Cowl Removal*

The inner cowl is the first item so far in this task that might make someone feel uncomfortable. Its not that it is that hard to remove but it looks tough to reinstall.

Actually it is quite easy to remove AND reinstall. Here is the sequence for removal which I feel most at ease.

Push the handle bars so that the front wheel is aimed all the way to the right. You will see on the right side of the plastic that holds the glove box two push rivets that secure the left inner cowl. Remove these two push rivets by depressing the center of the rivets with a Phillips screwdriver and then working the rivets out with your fingernails. Then get comfortable under the front of the bike. You are done up here for quite a while.

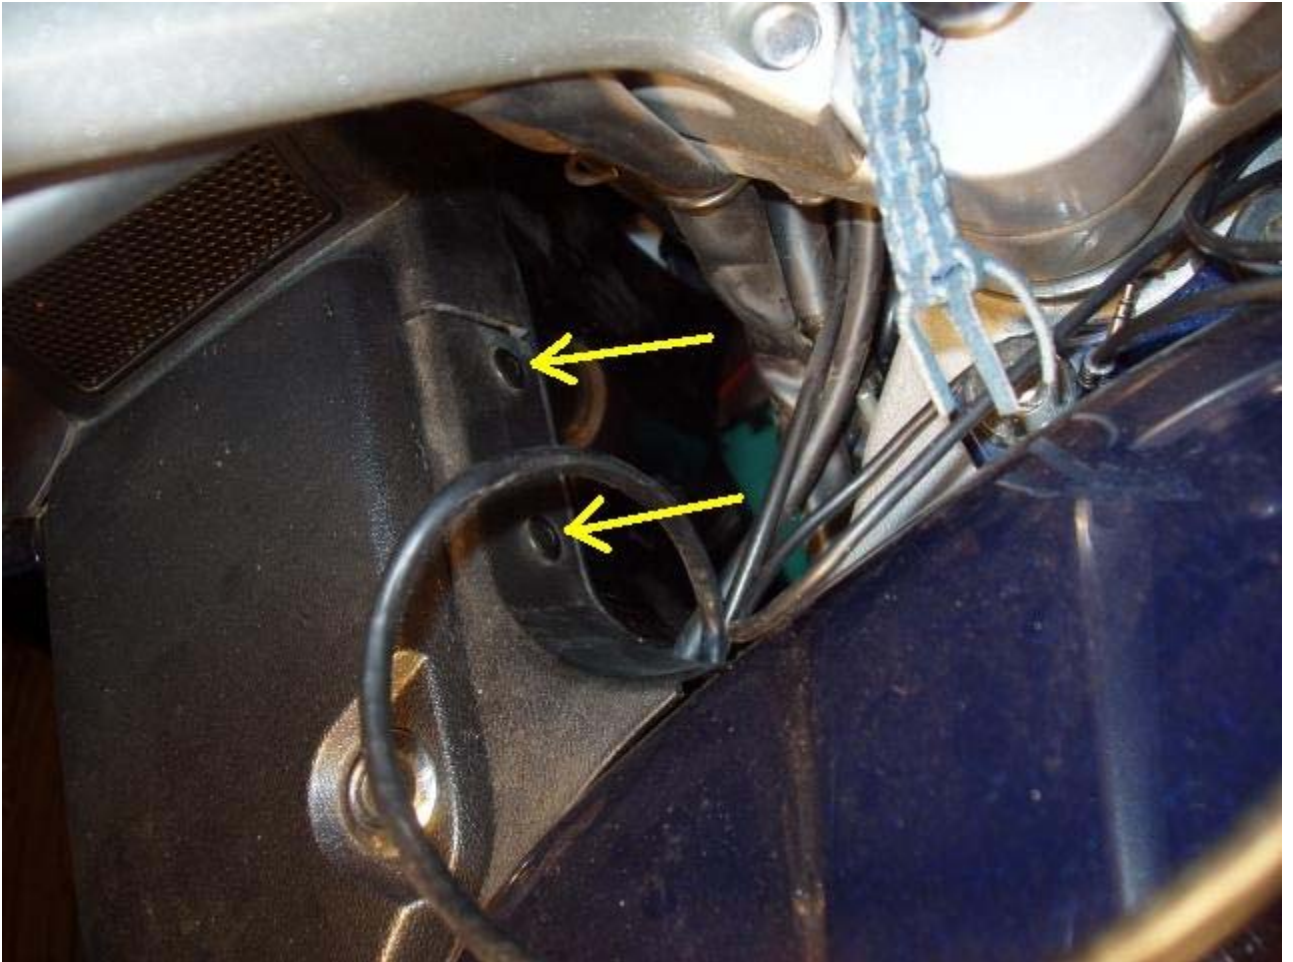

Remove the screw from the upper section of the inner cowl.



Remove the four trim clips from the inner cowl.



Gently work the inner cowl away from the bike by pulling it downward and toward the radiator.

**Important Note:** If you are removing the right side inner cowl you should be aware that there is an outside air temp sensor about half way up this cowl. Before you remove the cowl you need to disconnect the wire going to the sensor at the 2P connector or remove the screw holding the sensor in place.

Forward to Left Mirror Cover Removal